


REVERSE VIEW OF PICKUPS, SWITCH AND POTENTIOMETERS.

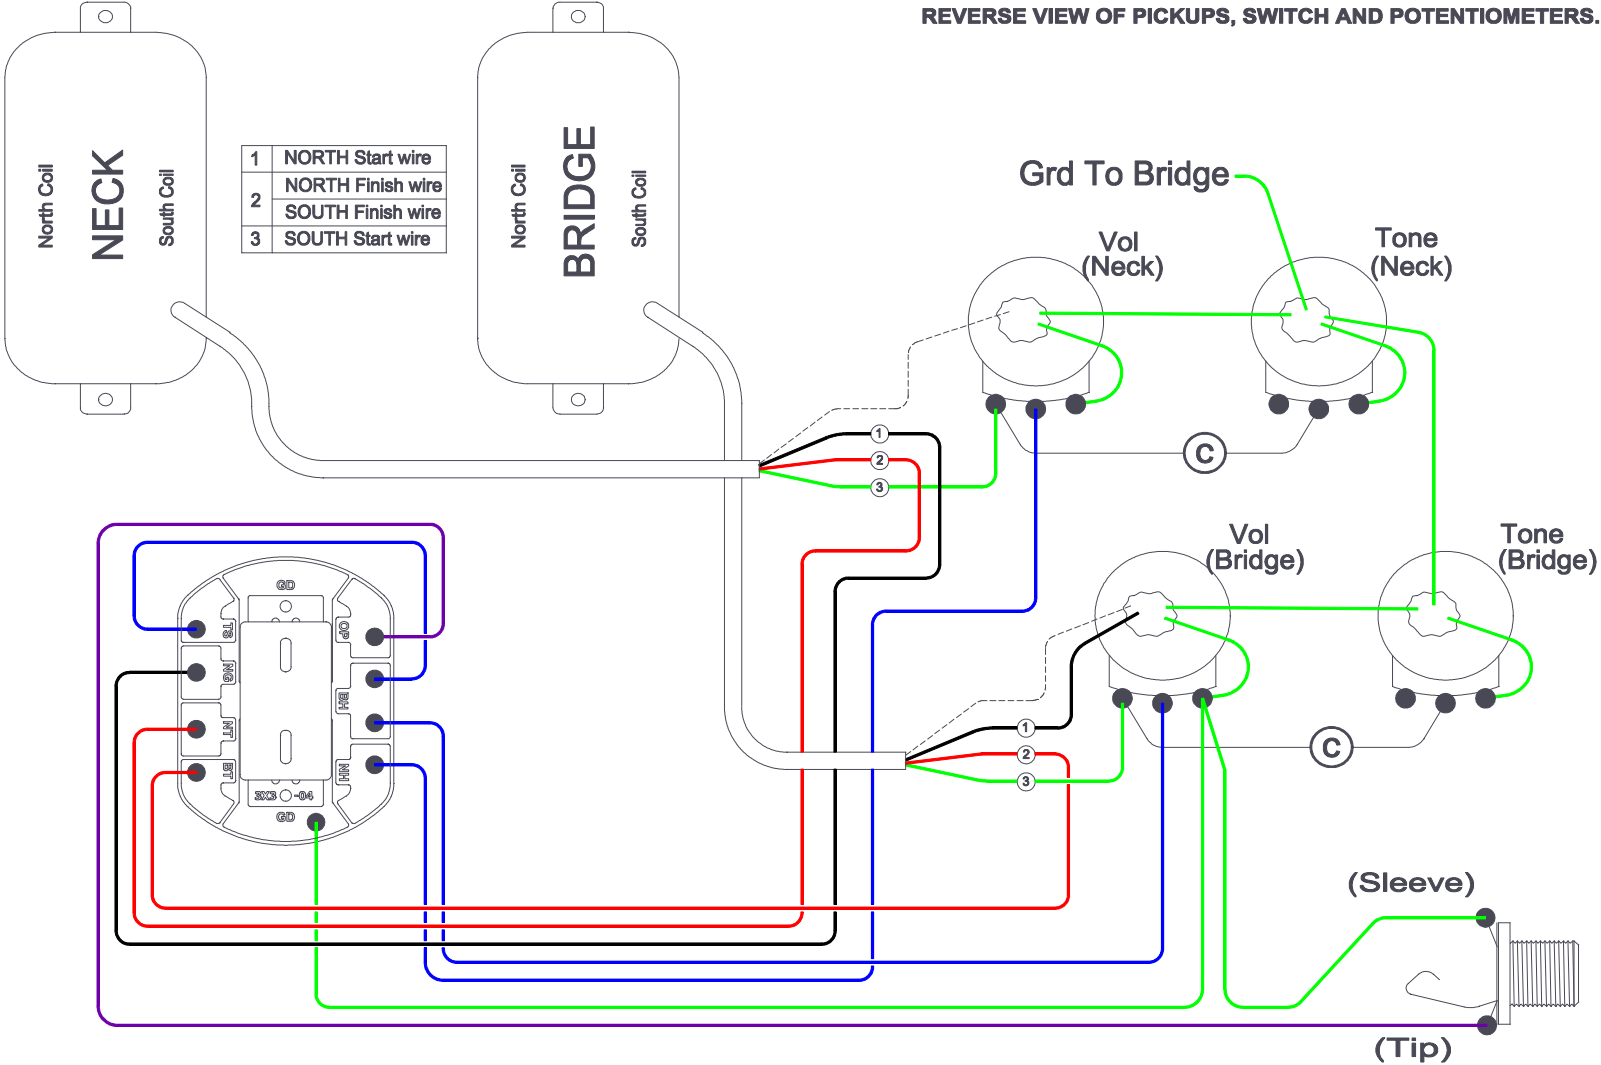

Tin the solder pads prior to soldering the wires.  
 Solder all ground wires onto pads marked 'GD'.  
 The metal casing is stainless steel and can not be soldered.  
 Avoid prolonged/excessive heating of pads.

Hum-cancelling in all positions  
 (Note:- one Pickup will either need to be reverse polarity,  
 or rotated through 180 degrees  
 to give the coil configurations shown above).

Note: Vol/Tone controls work as normal in positions 1-3  
 Neck Vol/Tone works in positions 4 & 5  
 Bridge Vol/Tone works in position 6

FREE-WAY JJ 3X3-04 Outer/Inner Coils - 2V2T Scheme